



DSD/DSDQ/ESD/ESDQ


Installation

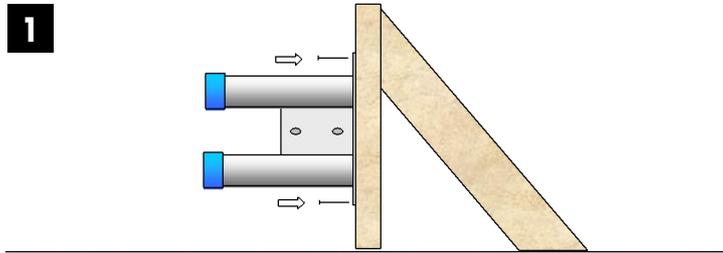


1 Nail sleeve to formwork. Do not remove sticky label, this prevents ingress of concrete into the sleeve

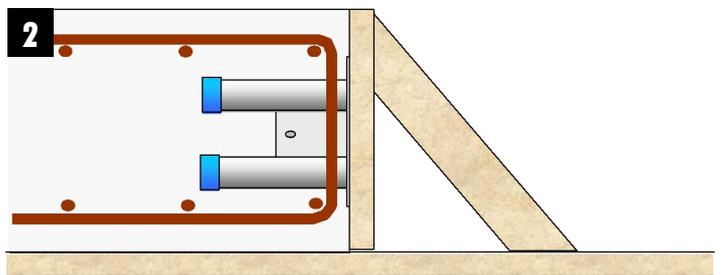


2 Fix the local reinforcement around the sleeve and pour the concrete

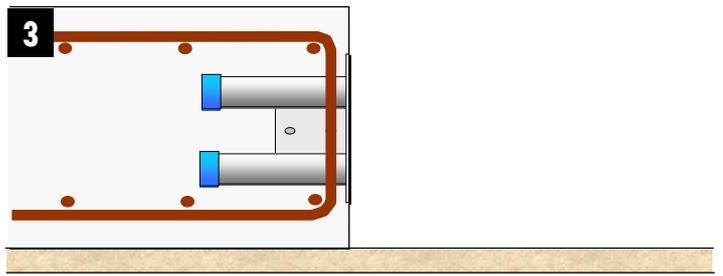


3 When the concrete has achieved sufficient strength, strike shuttering and peel off or puncture the label

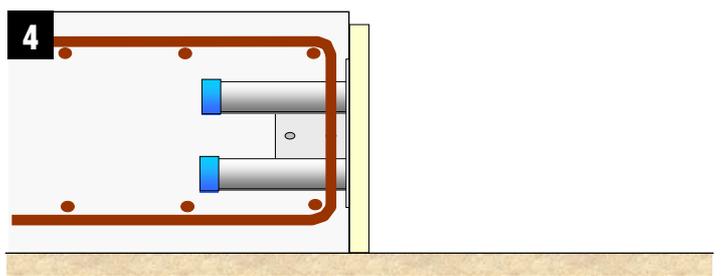

4 Position compressible joint filler

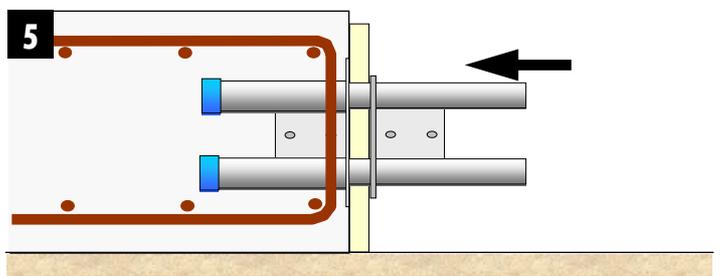

5 Push the dowel component through the filler until it is fully located in the sleeve

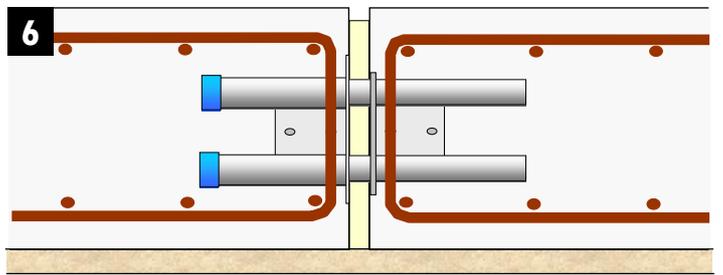

6 Fix the local reinforcement around the sleeve and pour the concrete